


# WIRELESS ANCHOR WINCH CONTROLLER

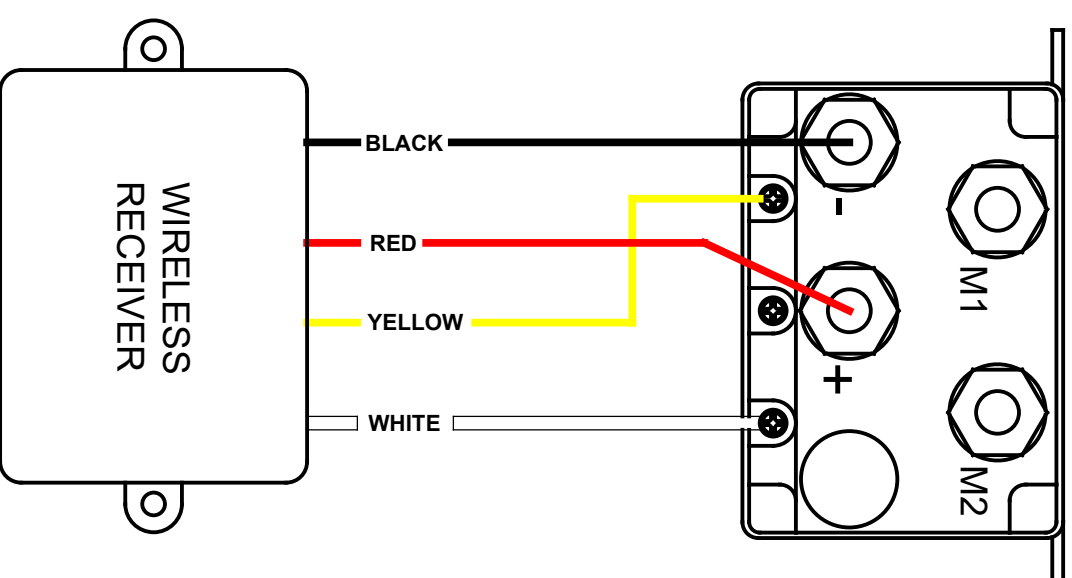

SOLENOID



**STEP 1**  
ENSURE POWER TO SOLENOID IS OFF

**STEP 2**  
MOUNT RECEIVER NEAR SOLENOID

**STEP 3**  
CONNECT RED LEAD TO POSITIVE POST (MARKED +)

**STEP 4**  
CONNECT BLACK LEAD TO NEGATIVE POST (MARKED -)

**STEP 5**  
CONNECT WHITE AND YELLOW LEADS TO SWITCHING POSTS

**STEP 6**  
SUPPLY POWER TO SOLENOID

**STEP 7**  
PRESS RED BUTTON ON REMOTE

**STEP 8a**  
PUSH IN AND OUT BUTTONS ON REMOTE TO TEST WINCH DIRECTION

**STEP 8b**  
IF WINCH DIRECTION IS BACKWARDS, SWAP WHITE AND YELLOW WIRES

**NOTE:**  
IF YOUR SOLENOID HAS BLADE TERMINALS, CUT OFF EYELETS FROM WHITE AND YELLOW LEADS AND FIT FEMALE SPADE TERMINALS TO SUIT